



SUPPLEMENT

MODEL: US-HPS8Y, US-HPS8YCA

DESCRIPTION: 100% TIE-OFF SAFETY
RETRACTABLE LANYARD ASSEMBLY

1-800-850-5914

PHOENIX, ARIZONA USA

WWW.ULTRASAFEUSA.COM

When using lanyards commonly referred to as, 100% tie-off. Y-type. double, or twin-leg, shock absorbing lanyards. This supplement provides additional information on the use of these types of safety retractable lanyards that are used with a personal fall arrest systems.

Practices that must be followed in order to use a 100% tie-off safety retractable lanyard safely.

- 1.) The safety retractable body portion of the lanyard assembly **MUST** be connected to the back dorsal D-ring **ONLY**, by way of a double locking lanyard snap hook (other connectors provided, consult ULTRA-SAFE. INC.) connect safety retractable directly to the dorsal d-ring
- 2.) Do not connect safety retractable to the anchorage point at any time.
- 3.) Do not connect the unused leg of the safety retractable to any portion of the full body harness, unless a specifically designed lanyard snap hook loop retainer is provided for this purpose.
- 4.) When connecting from one anchorage point to the next (traversing a vertical or horizontal structure) do not connect to an anchorage point further apart than, the length of the lanyard
- 5.) When using a 100% tie-off lanyard assembly, do not allow any part of the lanyard to pass under arms or legs.
- 6.) Connection of both lanyard legs to separate anchorage points is acceptable, as long as anchorage points are within the length of the lanyard.
- 7.) Do not allow retractable lanyard legs to become tangled or twisted together, this may prevent them from retracting.

When connected to the safety retractable the worker is free to move around within the recommended working area. The retractable legs should extend and retract without hesitation or creating slack in the web as the worker moves at normal speeds. The retractable provides continuous fall protection while descending, ascending, or moving laterally. With one leg attached to the anchor point (structure) the worker can move to a new location, attach the second unused leg, and disconnect original attached leg. Repeat this procedure until the work location is reached.

Avoid working where your personal fall arrest system may cross or tangle with that of another worker. Never knot, damp, or otherwise prevent the safety retractable lanyard from operating correctly or retracting.

Plan your personal fall arrest system before installing and using this equipment. When anchored above, you must have clearance for the system to deploy, allow 6 ft. Minimum from working level, if anchored at feet an additional 4 ft. clearance is needed, to avoid hitting a lower level. Assuming the fall occurs from a standing position and the anchor is located overhead.

ULTRA-SAFE Safety retractable's are not required a yearly inspection, contact us for more information 1-800-850-5914.

WARNING!

The user must read and understand these instructions, or have them explained to them, before using this equipment. Training must be conducted without exposing the trainee to a fall hazard. Training must be repeated periodically. If the safety retractable lanyard has been subjected to a fall arrest or impact, it must be removed from service and returned to an authorized repair station for inspection and service. Failure to follow instructions may result in serious injury or death.

Continued on Back